

Headlight

REMOVING THE LIGHT ASSEMBLY


Remove the headlight fairing ([Removing the headlight fairing](#)).

Loosen the two screws (1) and (2) that secure the instrument panel cover (3) to the front subframe and remove cover (3).



Warning


If the GPS is fitted, proceed as follows before sliding the instrument panel cover out and damaging the electric system.

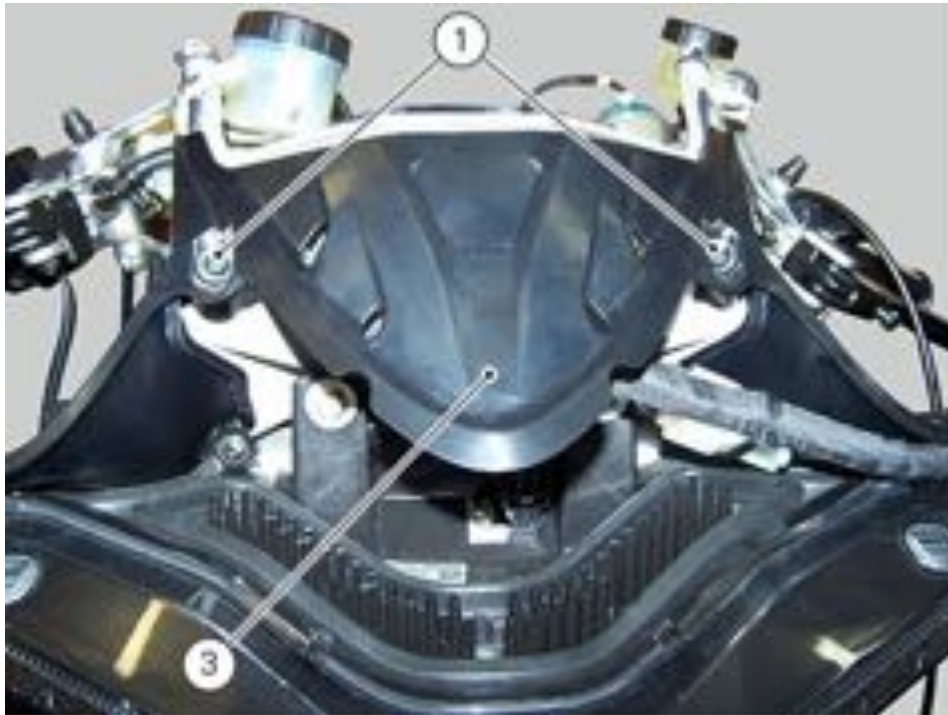

If GPS (X) (Optional) is present, disconnect it before removing the instrument panel cover (3).
If necessary, remove it by loosening the two screws (Y) and collecting washers (Z).



Disconnect the air temperature sensor (6).

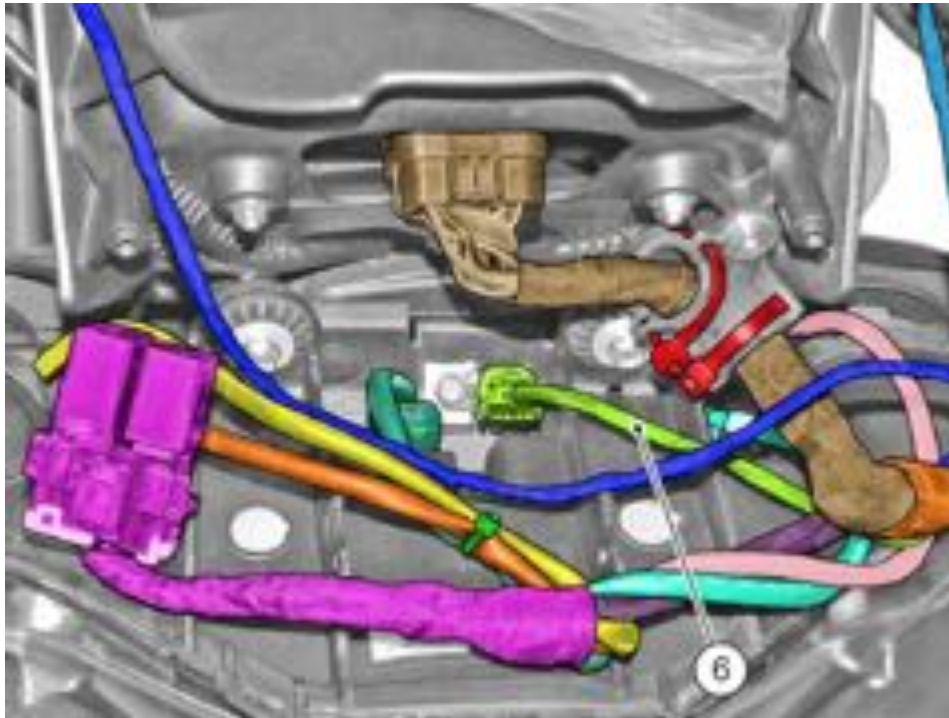

Loosen the two screws (4) securing light assembly (5) to the front subframe.
Loosen screw (10) and remove instrument panel wiring branch bracket assembly (11).



Release tie (12) and slide out front wiring branch support (13).






Disconnect the following connectors of the light assembly to main wiring:

- parking light connector (15);




- left-hand low beam (16) and left-hand high beam (17) connector;

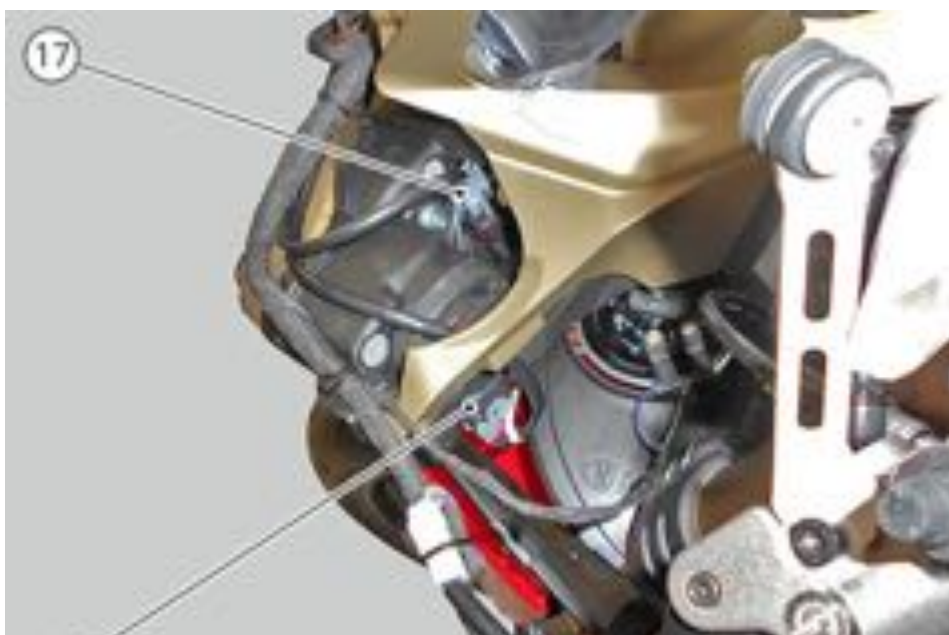




- high beam (18) and low beam (19) connector on right side.

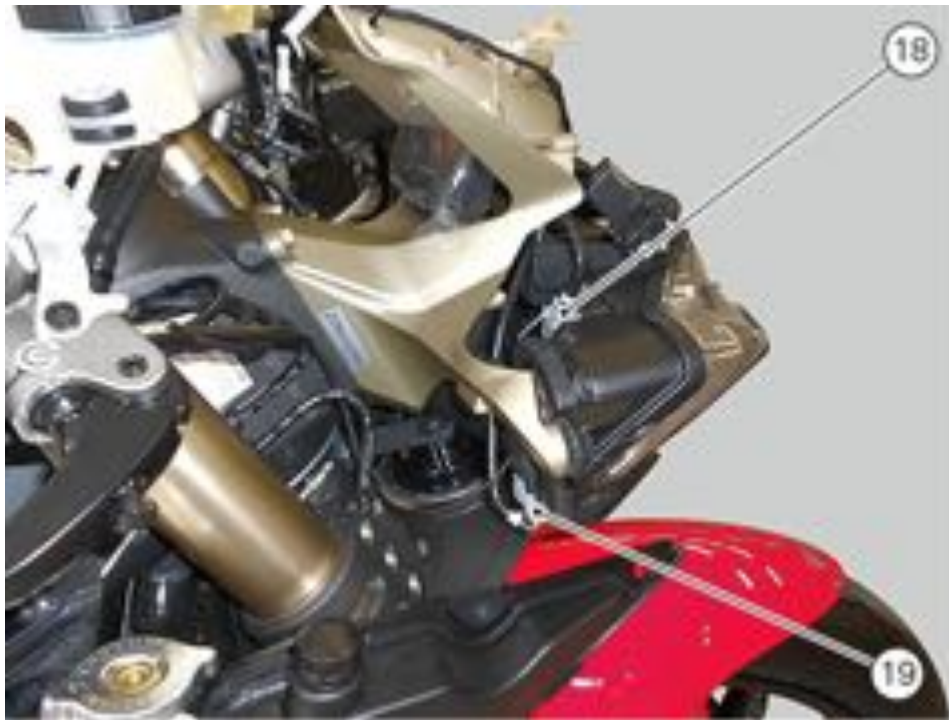

If necessary, loosen the two screws (20) and remove resonator (21).

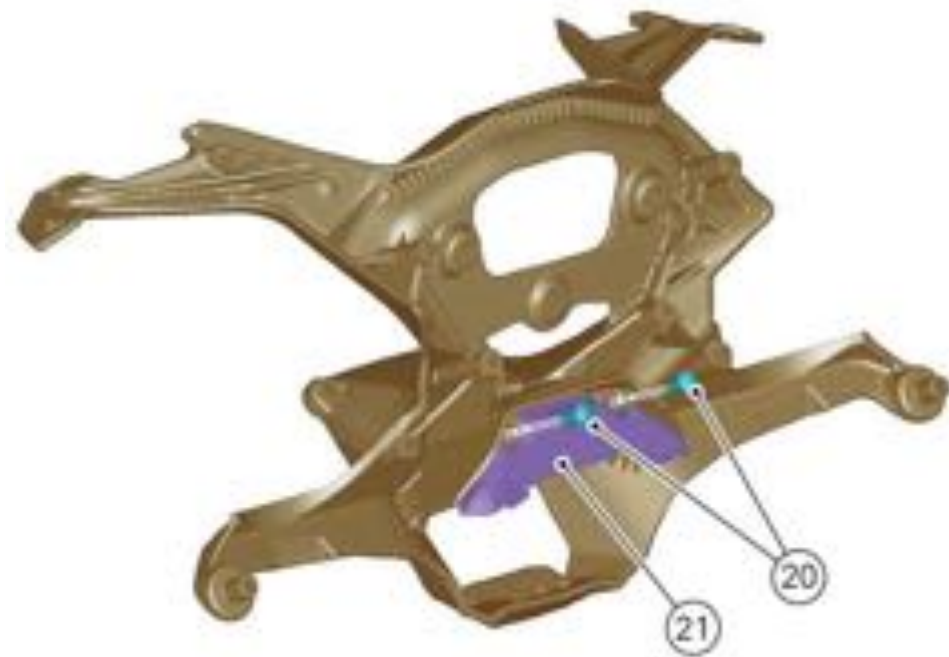

If necessary, loosen the screw (22) and collect air temperature sensor (6) with O-ring (23). Then loosen screws (24), (27), (28) and detach upper semi-conveyor (25) from the lower one (26) and from the headlight.

