

SPECIAL FUNCTION】 2019 DUCATI MULTISTRADA 1260 QUICK SHIFTER (DQS) ACTIVATION

Release time:

2021-07-13

Background

Background: DUCATI QUICK SHIFTER (DQS) can save shifting time without using clutch and turning off the accelerator and optimize the riding experience in cities or on winding roads.




Operation Methods

Operation Methods: **using OBDSTAR MS80 to activate DQS.**

Detail Steps:

① Connect MS80 to Motorcycle, enter into **【Moto Diag】** ;

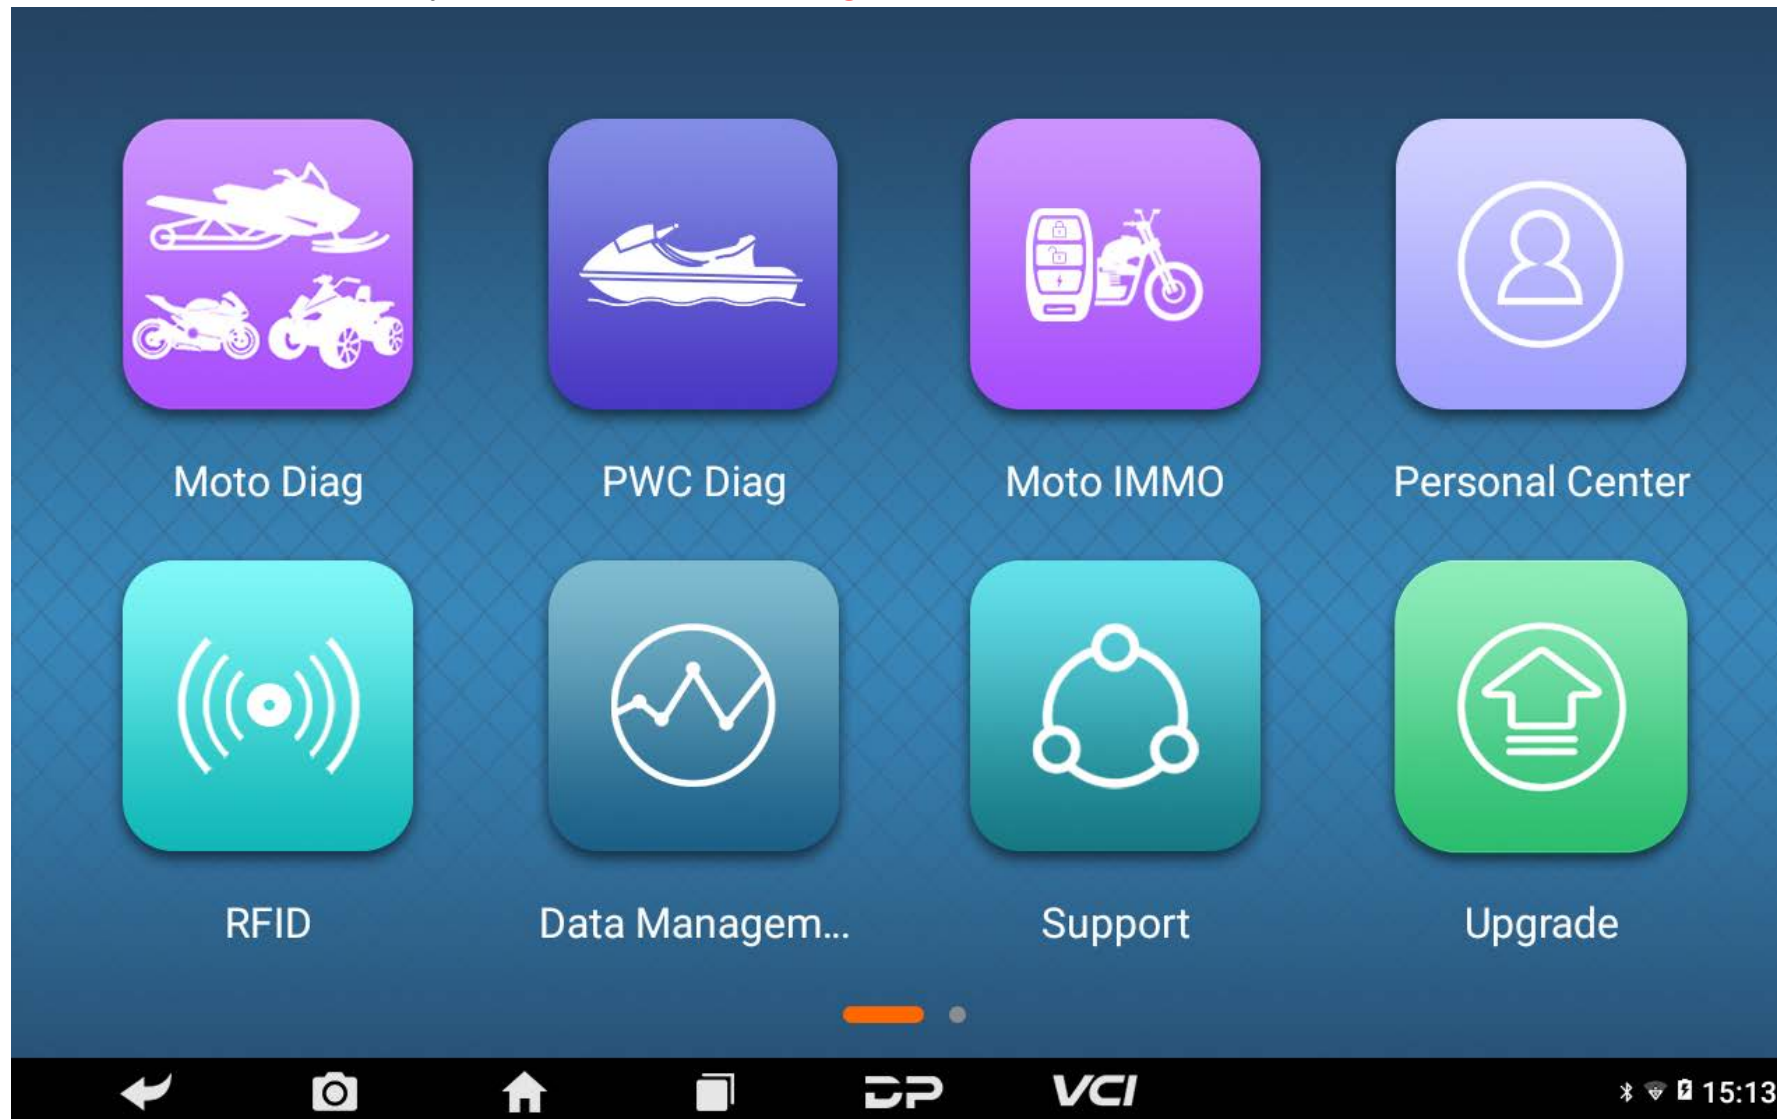

②Click **【All】** , input letters such “DU” in search bar, click **【DUCATI】** ;




③Click the newest DUCATI edition;



④Click **Auto Identify [VIN]** ;

Tips: can also click **Select from vehicle** to the correct menu;

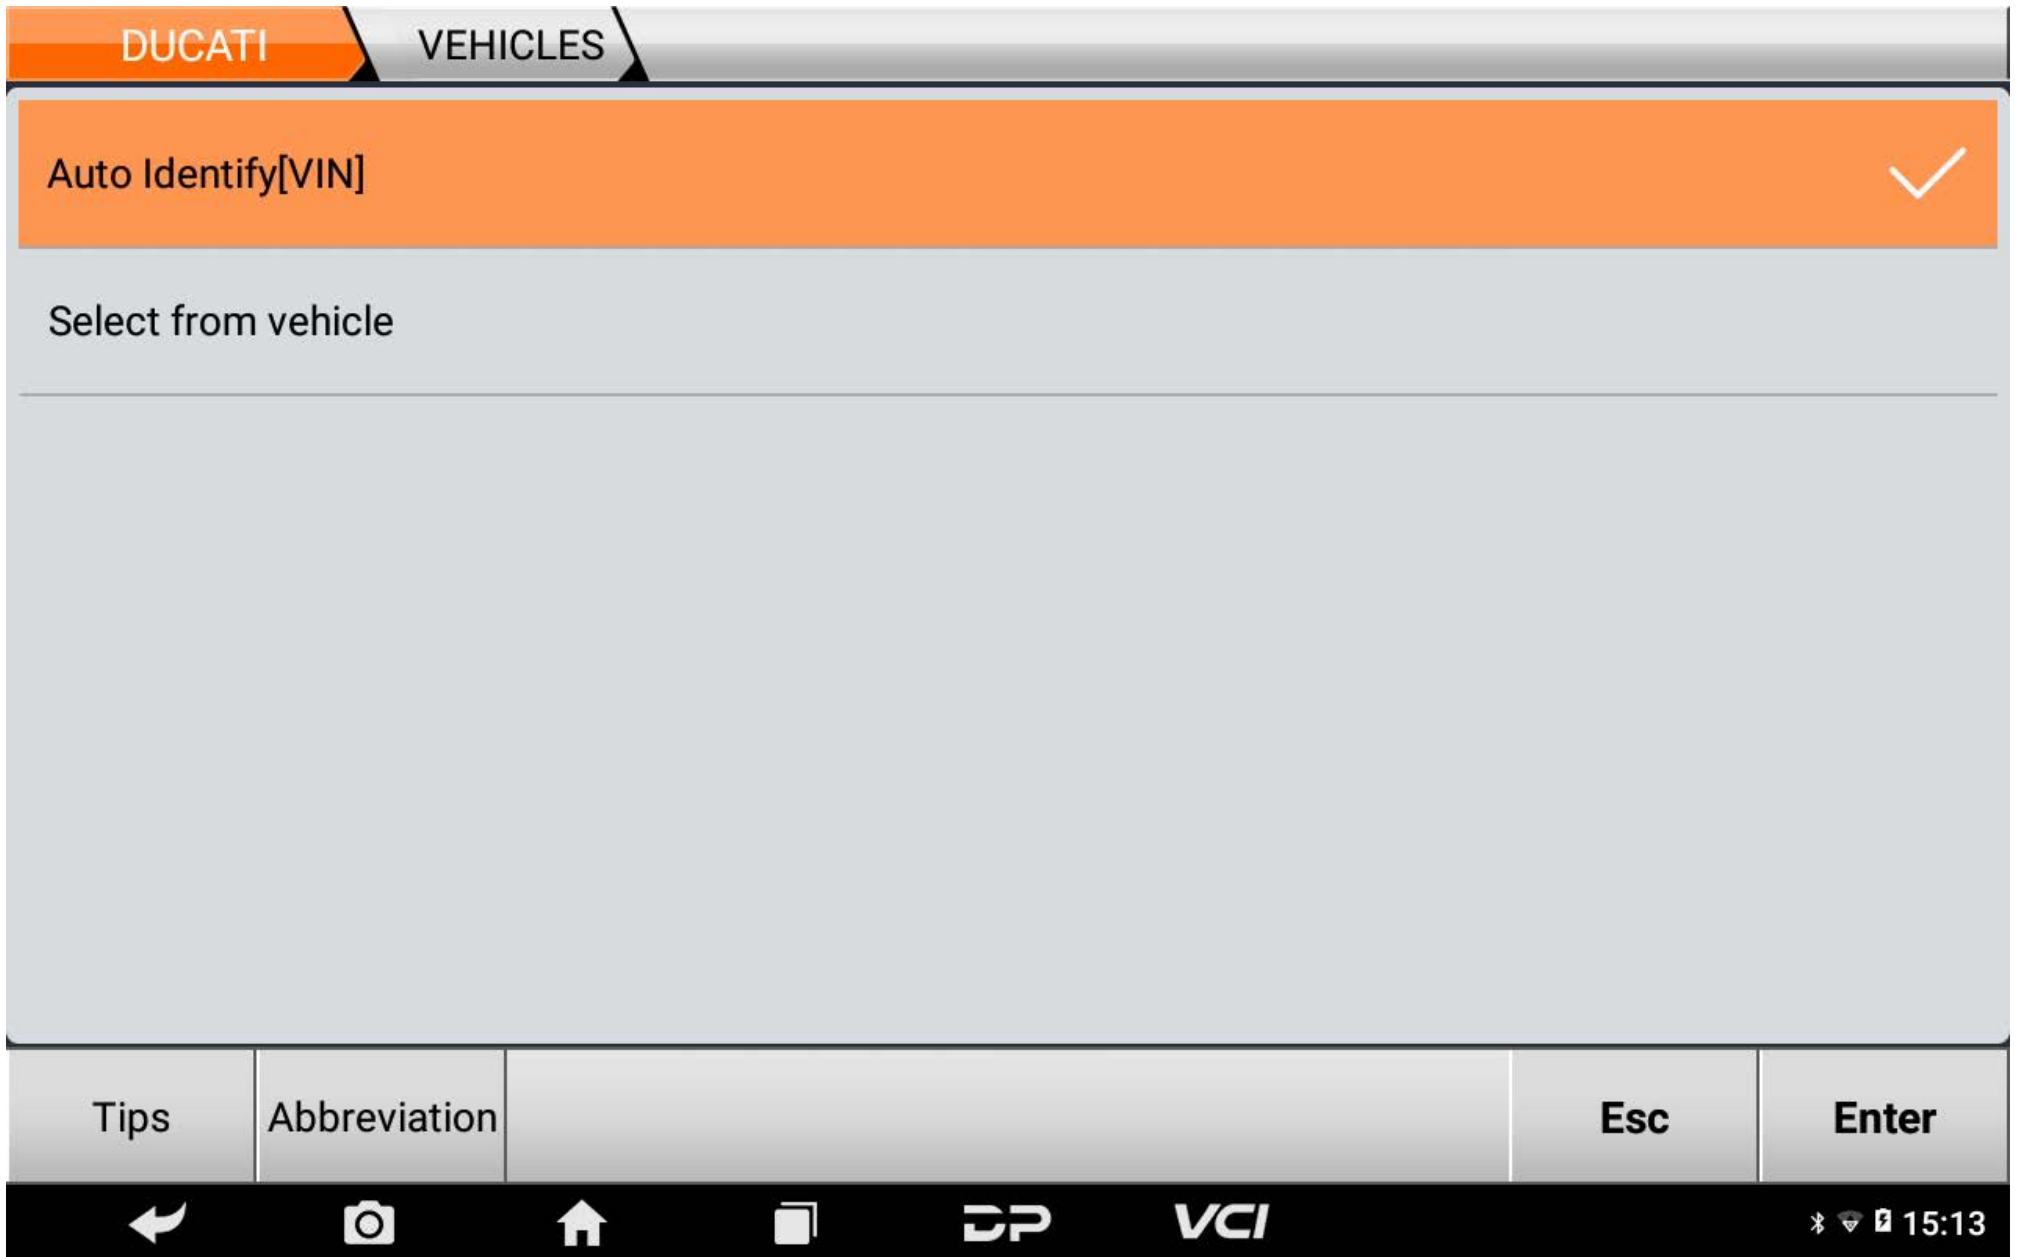

⑤After confirming VIN code, click **Enter** ;

The VIN code of the vehicle: [redacted] ; Please confirm the correct.

Esc

Enter



* 15:13

©Click **【Multistrada 1260 > 1262cc > Motorcycle(Road)|-|MY 18】** ;

DUCATI

VEHICLES

Auto Identify[VIN]

Multistrada 1260 > 1262 cc > Motorcycle (Road)|-|MY 18



Multistrada 1260 Pikes Peak > 1262 cc > Motorcycle (Road)|-|MY 18

Multistrada 1260 S/T > 1262 cc > Motorcycle (Road)|-|MY 18

Multistrada 1260 Enduro > 1262 cc > Motorcycle (Road)|-|MY 19


Esc

Enter



15:13

⑦Click **BBS** ;

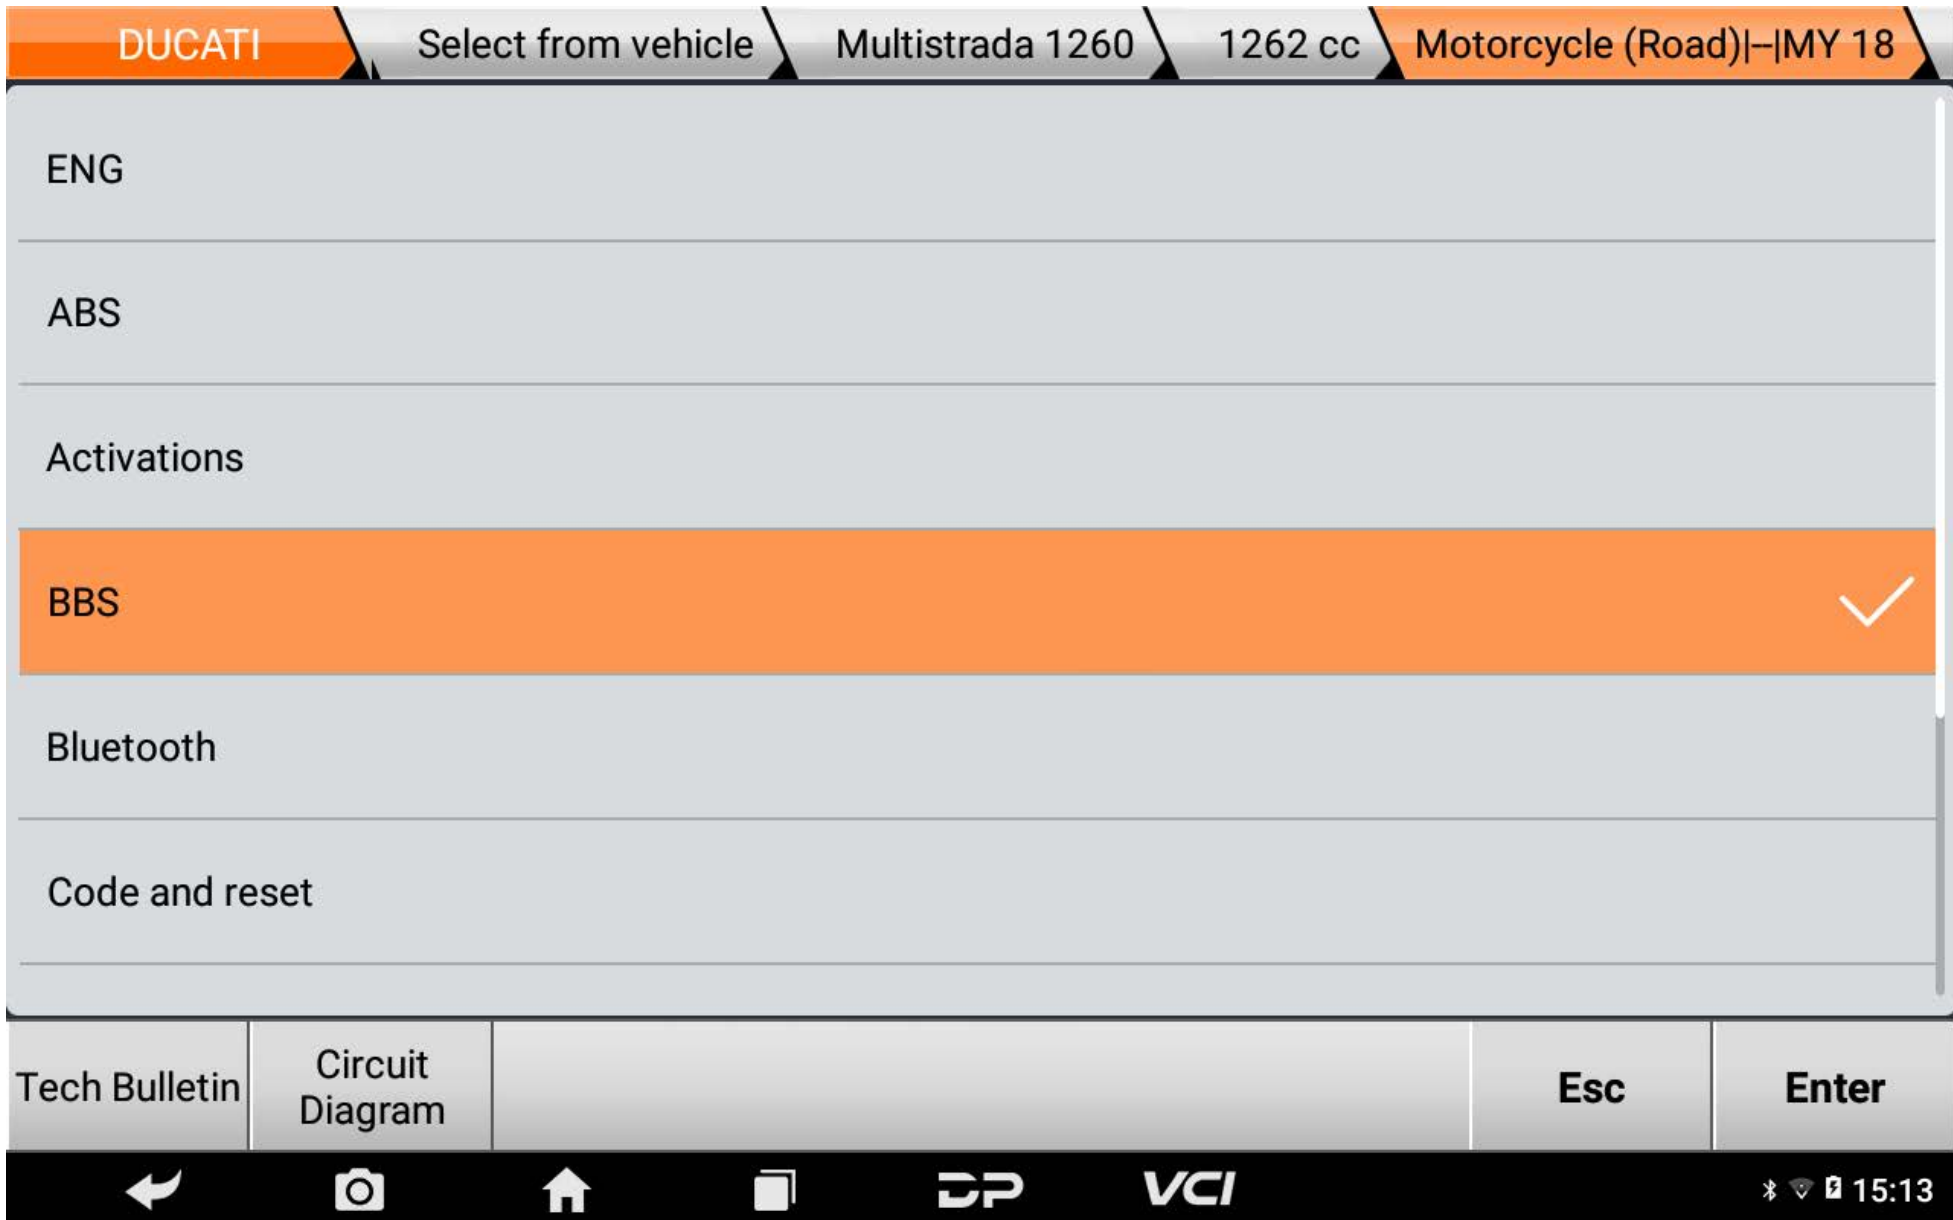

⑧Click **Enter** ;

Tips: can click **Diag Socket** or **Diag Connector** check diag socket position or diag cable information.

DUCATI

from vehicle

Multistrada 1260

1262 cc

Motorcycle (Road)|-|MY 18

BBS

Egicon -- MY 18 -



Diag Socket

Diag
Connector


Esc

Enter



* 15:33

- Left side
- Right side

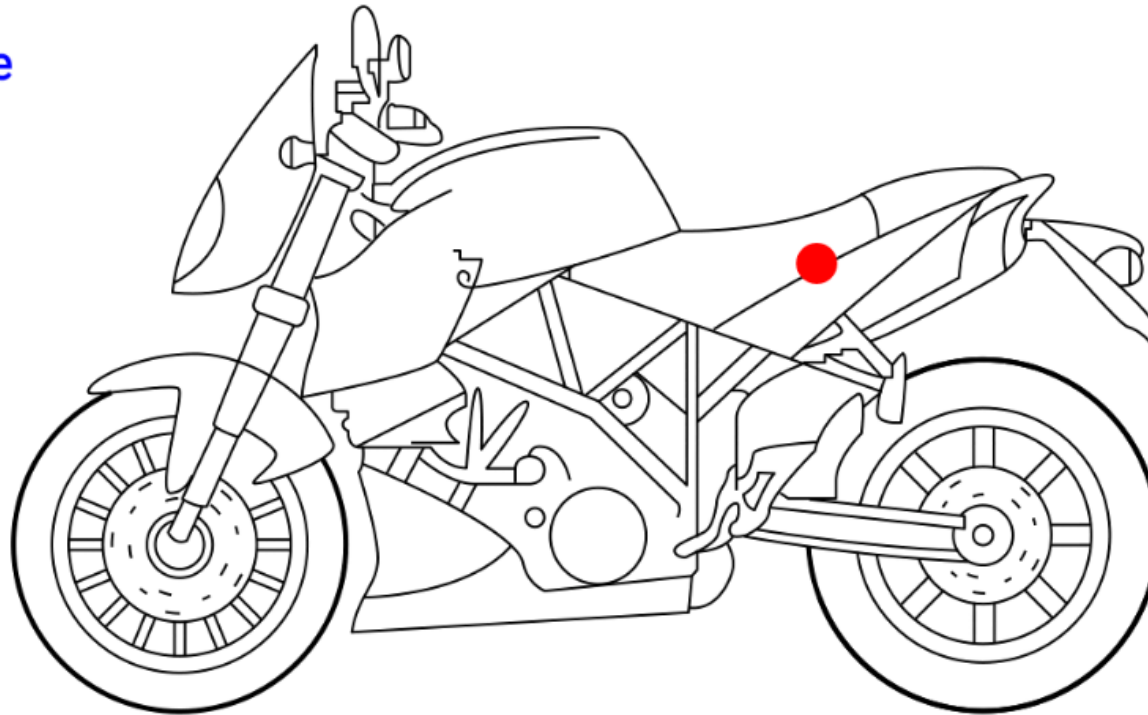


Diag Socket

Diag
Connector

Esc



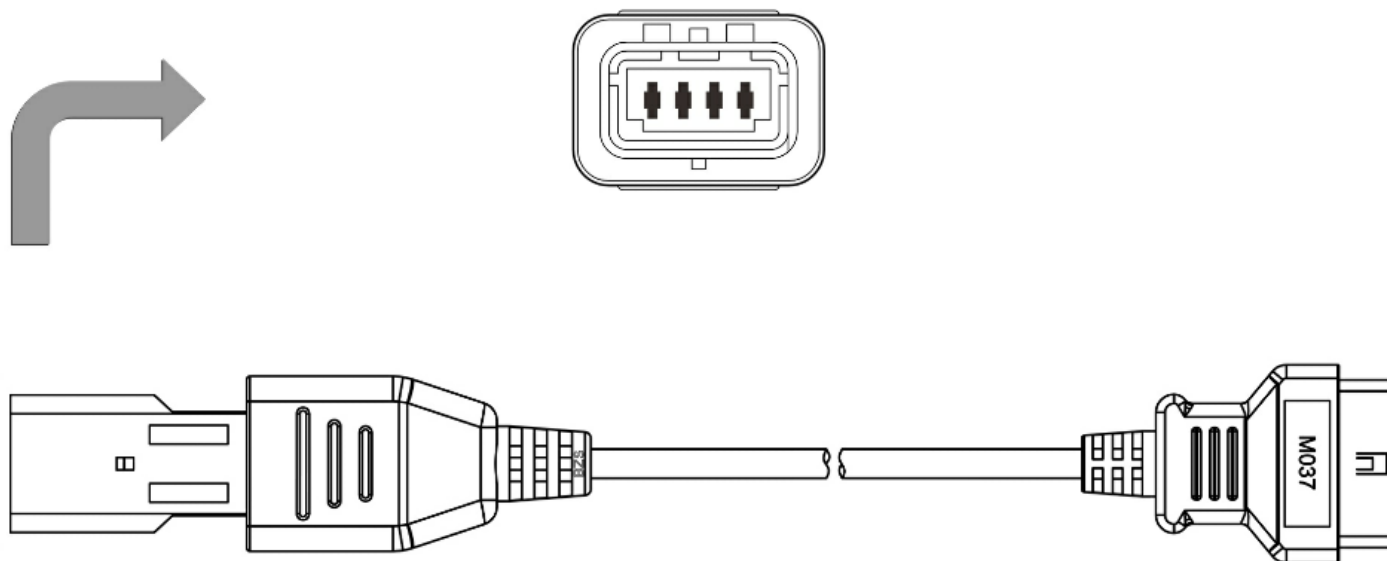

Diag Socket

Diag Connector

Esc



* 15:14

Click **Special Function** ;

DUCATI

information

Ecu Information

Read fault codes

Erase fault codes

Read data flow

Active Test

Special Function



Esc

Enter



* 15:14

⑩Read note, click **【Agree】** ;

Note:

1. Some adjustments or settings may cause vehicle failure, therefore our company does not assume any responsibility
2. It is recommended to refer to the original maintenance data for operation.

Agree

Esc



* 15:14

⑪ Input password 123, click **【Enter】** ;

Password 123, please

1	2	3	4	5	6	7	8	9	0	⌫
q	w	e	r	t	y	u	i	o	p	,
a	s	d	f	g	h	j	k	l	.	⌵
z	x	c	v	b	n	m	-	-	⌵	

DUCATI

Special Function

Password 123, please

123

Esc

Enter



* 15:14

⑫Click **【Enable/disable DQS】** ;

DUCATI

Special Function

Odometer writing (totalizer)

Fuel level value reset

Enable/disable DQS



TPMS enabling/disabling

Heated grips enabling/disabling

Anti-theft enabling/disabling

Esc

Enter



15:14

⑬ Click **Enter** ;

DUCATI

Enable/disable DQS

Press Enter to continue or Esc to end


Esc

Enter



* 15:14

⑭ Click **Enable** ;

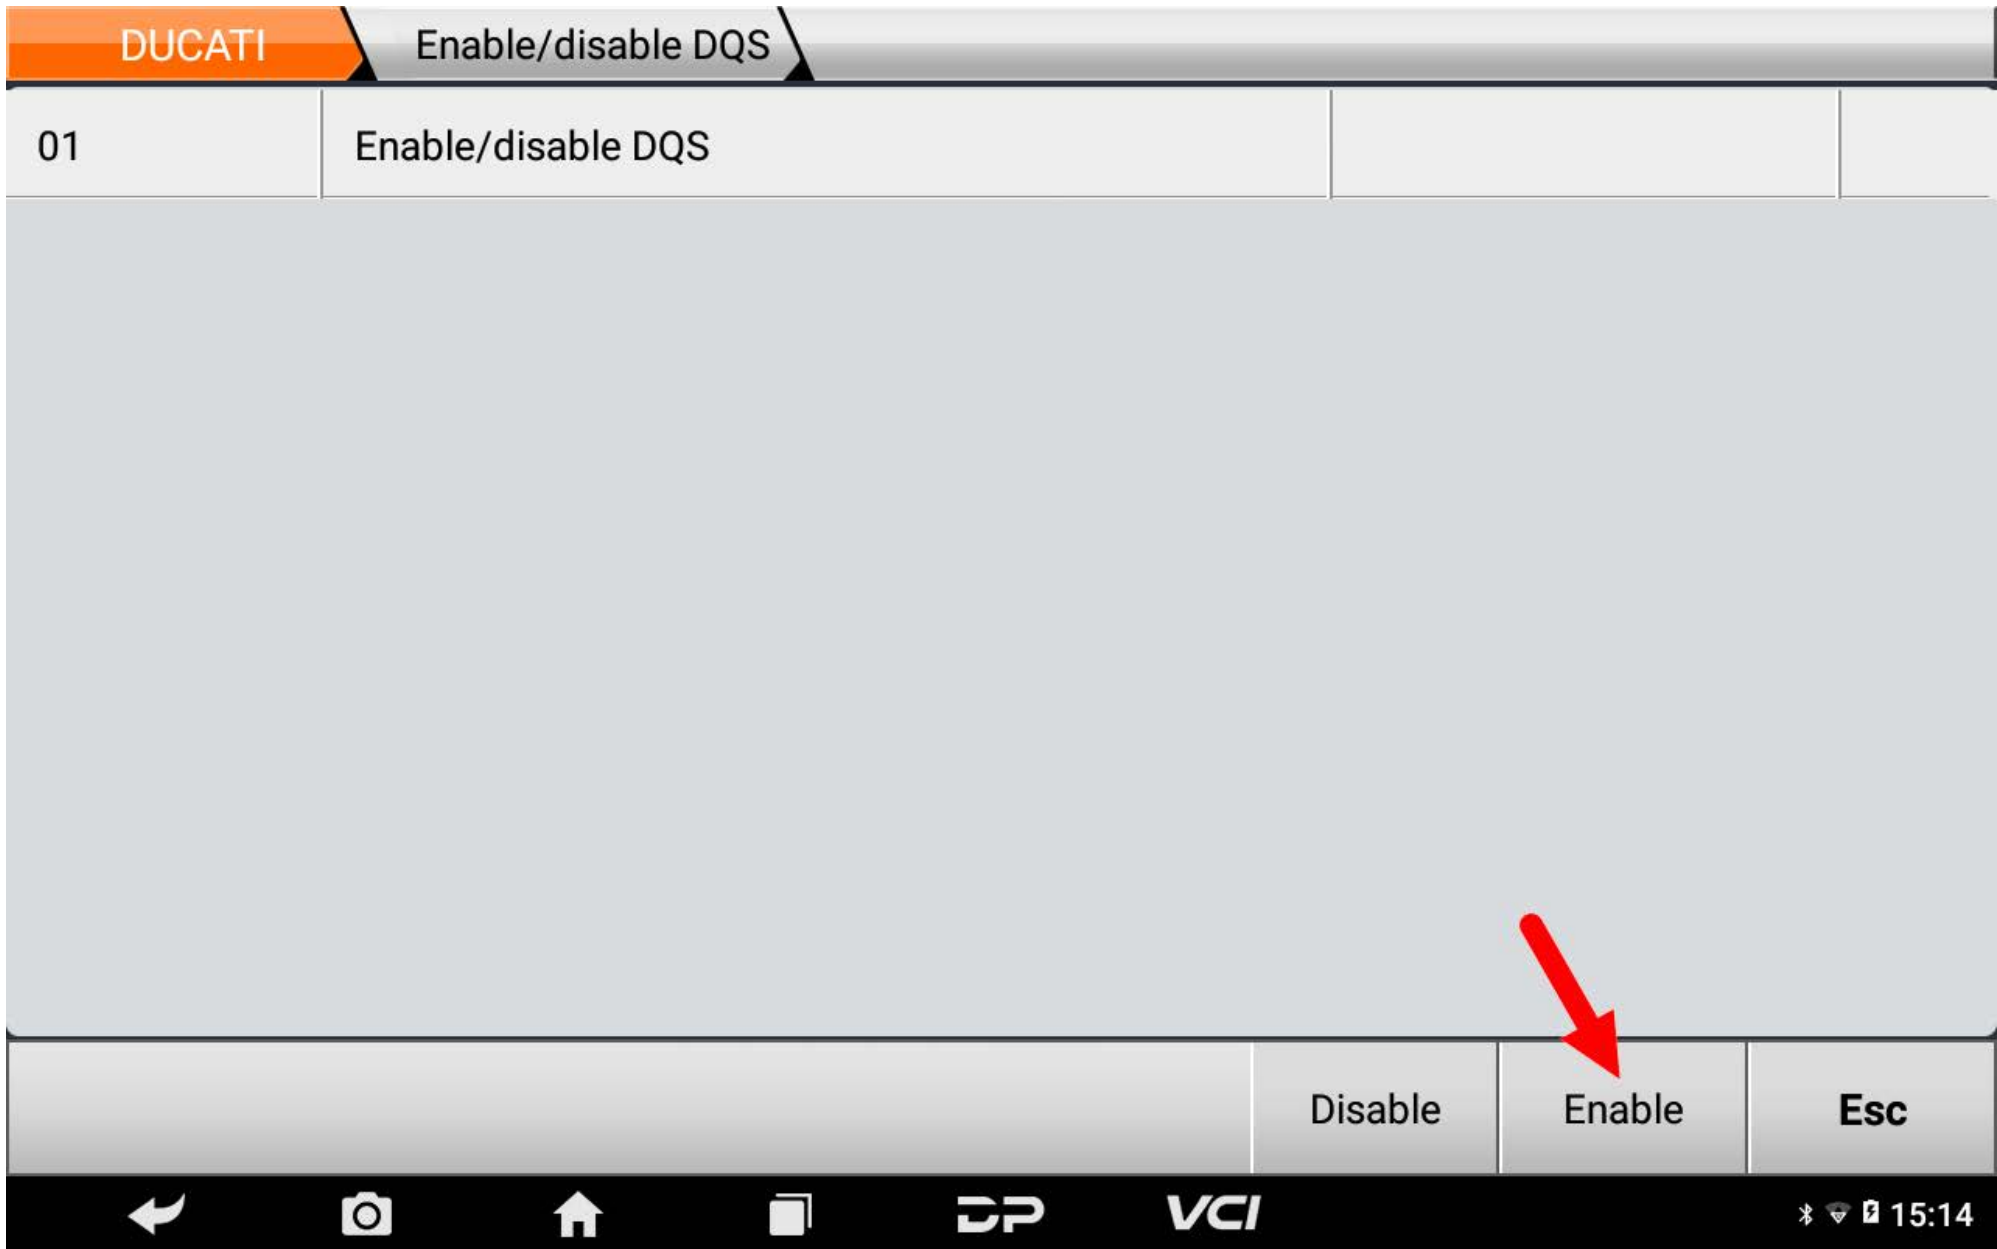

⑮ Procedure complete, the instrument panel shows "DQS-UP/DW" , quick shifter activation done.

Procedure complete

Enter



GEAR

N

0

km/h

DQS - UP/DW



TOT

DTC 5
ABS 3
DWC 3

km