

I . Wi-Fi

This function enables you to enjoy surfing on the Internet and downloading data from the Internet via Wi-Fi.

Set Wi-Fi on

Enter main menu screen, choose "Settings" > "WLAN"

When the WLAN sign appears blue, it indicates Wi-Fi has been activated already.

Note: To prolong the battery life, please switch Wi-Fi off when it keeps unattended.

Connect to WLAN

Start WLAN, if this device is within range of WLAN, it can automatically detect and connect to current WLAN, select desired network and input password, then you can surf the internet by WLAN.

II . BROWSER

You can use any APP based on browse website and network.

Open the browser

Enter main menu screen, tap to OBDSTAR the browser. You can choose the desired homepage or input the website address to browse.

Tap to input or edit the web link

Web page display area

Tap to open bookmarks, view history and saved web pages.

Browser webpage

Open the browser.

Input the web address, and tap "Go" on the keyboard to visit the website.

Tips: Alternatively, you can also tap, and then choose "Bookmarks/History" from the pull-down list to choose the web link you want to access.

After a webpage is open, slide the screen with the tip of your finger to view other hidden content.

Zoom in/Zoom out a page

There are two ways to zoom in/ zoom out while browsing a webpage.

To zoom in so that the text on a webpage appears in a column that fits your device's screen, double-tap with the tip of your finger.

To zoom in manually, place two fingers on the screen and then spread them apart. To zoom out, either double-tap again or place two fingers apart on the screen and then pinch them together.

Save favorite webpage to bookmark

While browsing a webpage, tap , and choose "Save to bookmarks".

Edit a label for the bookmark.

Tap "OK" to confirm and save it.

Open multiple pages

The browser allows you to open multiple web pages and you can toggle between these pages.

While browsing a webpage, tap and open new window.

Another web page will be displayed in the new window.

Customize internet settings

While browsing a webpage, choose "Settings", you can view or change browser settings, privacy & security setting and advanced setting etc.

III. GALLERY

This option is used to manage pictures and video files.

Open gallery

Enter main menu screen, tap "Gallery" to access it. The system searches images and videos in this device and SD card automatically, and categorizes it into corresponding folders.

View a photo

Enter main menu screen, tap "Gallery".

Tap the picture folder you want to view.

Tap the desired image to browse.

Swipe the screen rightwards or leftwards to view the next/previous picture.

IV. MUSIC

Music files are stored into 4 categories: Artists, Albums, Songs and Playlist. Tap the desired music to display music.

Tips: While playing, tap back button to switch to other applications and the player will be running in background. Open the status bar and choose the audio file to return to the player screen.

V. CALCULATOR

You can use calculator to operate algorithm of plus, subtract, multiply and divide, and function operation of sin, cos, tan and log.

VI. CALENDAR

This function lets you view calendar or create to-do events. Enter main menu screen, tap "Calendar". Swipe up and down to switch to month; Tap someday, the followings can be done. Tap to refresh, search, and hide control and setting.

VII. ALARMS

Add an alarm

Enter main menu, and tap "Alarm".

Tap to add alarms.

Set the detailed information of the alarm.

Tap to pack up the alarm to store the setting.

Delete an alarm

Enter main menu, and tap "Alarm".

Tap the desired alarm.

Tap to delete it.

Tips: After the alarm is deleted, you can choose to cancel delete alarm on the right side from the option menu.

Customize your alarm

Enter main menu, and tap "Alarm".

Tap menu button, and then choose "Settings".

Alarm volume: Set the volume of alarms.

Set the duration of alarm.

Set the duration the alarm snooze next time.

Volume buttons: set what these buttons function when pressed during an alarm.

Set default ringtone: choose the alarm ringtone.

Countdown setting

Enter the main menu to tap to choose count down alarm;

Set the time of countdown;

Tap to add count down alarm, and tap to delete alarm;

Tap to start count down, and tap to stop count down;

Notice: after the countdown ends, the device will ring alarm sound.

Second clock setting

Enter the main menu to tap to choose second clock;

Tap to start second and clock, and tap to stop second clock;

Tap to reset second time;

Tap on the right side to display the smaller unit counter of second clock;

VIII. ES FILEEXPLORER

Open ES file viewer, and enter main menu. You can manage SD card, browse by category and browse all music, picture, video, document application, package, favorites, installation package, management recommended through catalogue.

IX. DISPLAY

Brightness

Enter main menu screen, tap "Settings" > "Display".

Tap "Brightness" to enter.

Drag the slider leftward to lower the screen brightness. Drag the slider rightward to increase the screen brightness.

Auto-rotate the screen

Enter main menu screen, tap "Settings" > "Display".

When setting the rotation of device, remain the orientation of the rotated screen.

X. Set Screen Lock

You can set the screen lock pattern, and when the screen is locked, it will not be unlocked until you draw the right pattern.

Enter main menu screen, tap "Settings" > "Security" > "Screen lock".

There are several options available for your selection. To define a pattern, follow the on-screen prompts to plot your pattern.

After drawing, tap "Confirm" to save your setting.

XI. APPLICATION

View installed applications

Enter main menu screen, tap "Settings" > "Apps" to open the downloaded application list.

The following operations can be done:

Tap the desired one to view the application information.

Tap and choose "Sort by size" from the pull-down menu, the applications will be displayed in size order automatically.

Tap and choose "Reset app preferences" from the pull-down menu, a confirmation dialog box will appear on the screen, tap "Reset apps" to proceed; tap "Cancel" to abort.

To uninstall an application, tap it to enter the application information screen.

Tap "Uninstall" and then follow the on-screen instructions to finish it.

View the running applications

Enter the main menu screen, tap "Settings" > "Apps". Scroll the screen from right to left to RUNNING tab to open the currently running application list.

The following operations can be done:

View the currently running applications;

Tap any one to stop it.

XII. LANGUAGE&INPUT METHOD

Language setting:

Enter the main menu screen, tap "Settings" > "Language & input"> "Language".

Tap "Language" and choose the desired language in this device.

input method setting:

The device provides several kinds of input methods. Tap setting before the desired input method.

XIII. SET DATE&TIME

This device is preset to use the network-provided date, time zone and time. Note: If Automatic date & time is set as Use network-provided time, date, time and time zone will not be defined.

Enter the main menu screen, and tap "Settings" > "Date & time".

Tap "Set date", and scroll the screen upwards and downwards until the desired numbers appear on the highlight area.

Tap "Select time zone", and choose the desired one from the time zone list. Scroll the screen upwards and downwards to view more.

Tap "Set time" and scroll the screen upwards and downwards to adjust the hour and minute. After setting, tap "Done" to confirm.

Select or deselect "Use 24-hour format" to switch between 12-hour format and 24-hour format.

Tap "Choose date format" to choose the desired date of this device format from the list.

XIV. RESTORE TO FACTORY SETTINGS

This option enables you to restore this device to the default factory settings. Once it is reset, all data (including downloaded applications) will be deleted. Note: Before resetting to factory data, please back up all important data saved in your device.

Enter the main menu screen, tap "Settings" > "Backup & reset" > "Factory data reset".

Follow the instructions on the screen to proceed.

XV. STORE

Enter the main menu, and tap "Settings"> "Storage", check the store situation of the device.Store the download content in the default browser to the download content list.

XVI. APPS INSTALLATION/ UNINSTALL

Install: Put the application package under the root directory of SD card, enter "File Manager" and then tap the desired package to start installing.

Uninstall: Tap "Settings" > "Apps", and choose the desired one to uninstall.