


DUCATI Pantah 500SL

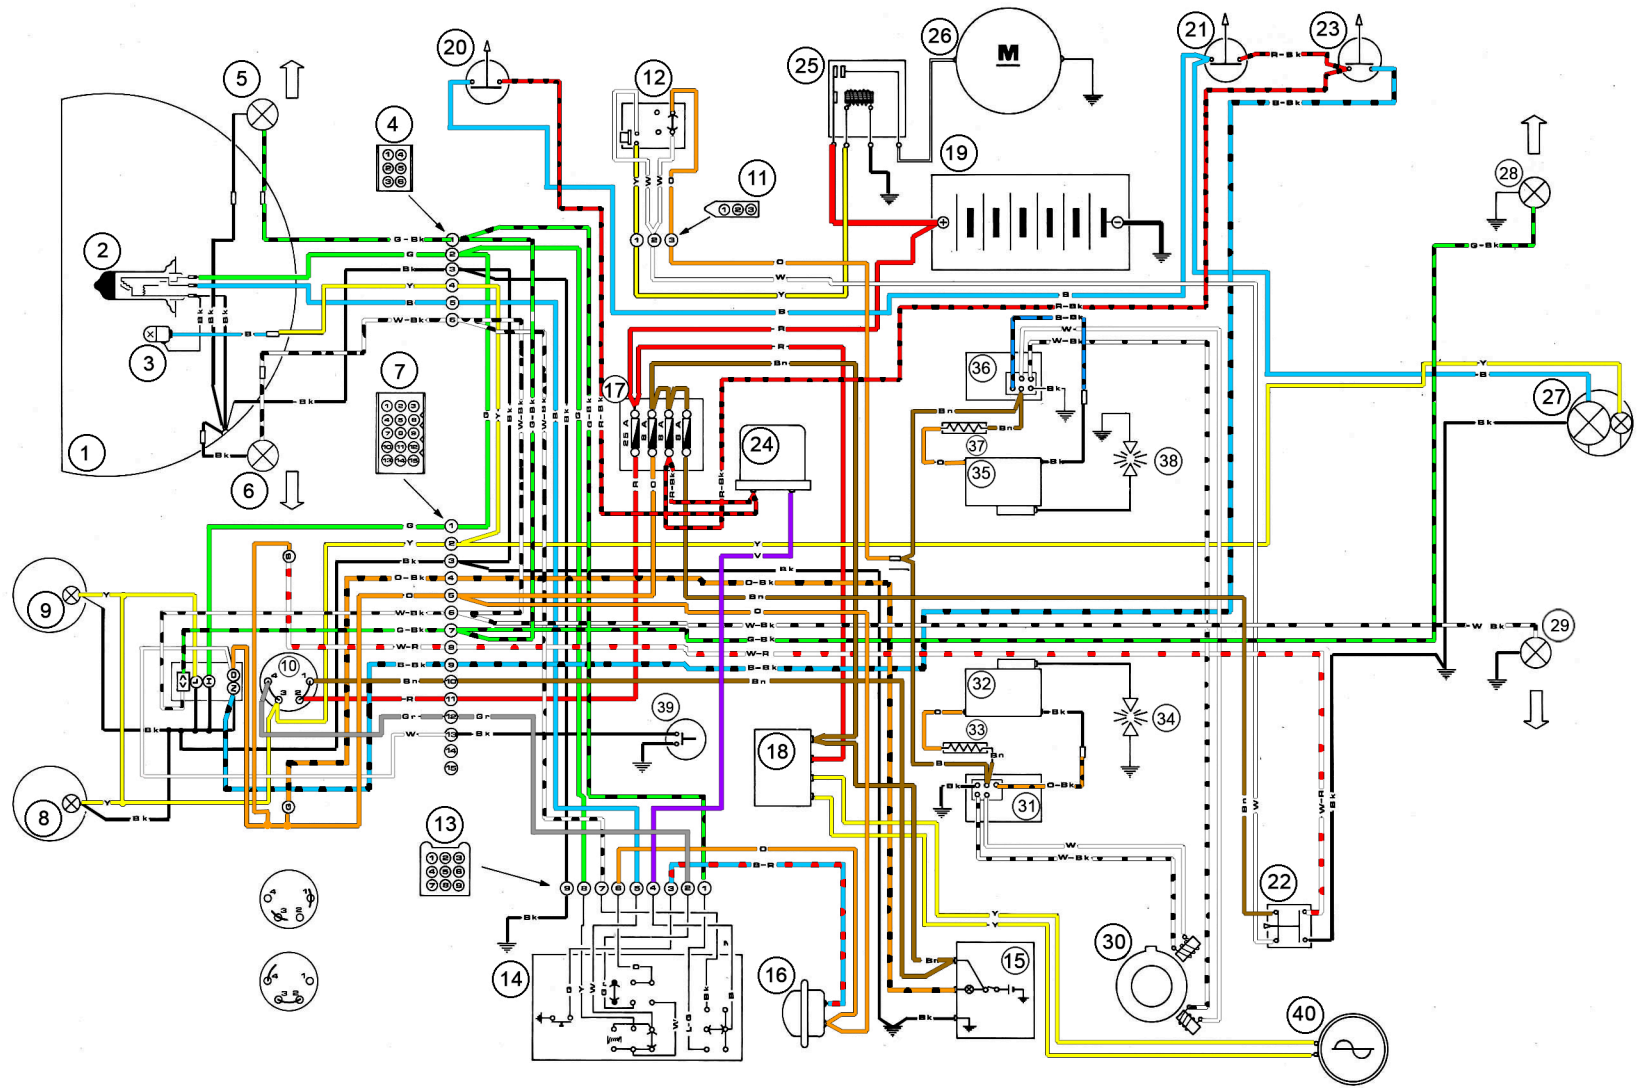

LEGEND

- | | | | |
|----|---|----|--|
| 1 | Headlight | 21 | Rear stop switch |
| 2 | H4 - 12V-55/60W bulb | 22 | Side stand warn light switch (on demand) |
| 3 | 12V-3W parking light | 23 | Neutral gear warn. light switch |
| 4 | 6-pos headlight connector | 24 | 12V - 42W flash device |
| 5 | 12V-21W RH front flasher | 25 | Electric start motor solenoid |
| 6. | 12V-21W LH front flasher | 26 | Electric start motor |
| 7 | 14-pos. dashboard connector | 27 | 12V-5/21W tail light - stop - plate |
| 8 | Miles or Km. speedometer | 28 | 12V-21W rear flasher |
| 9 | Rev. counter | 29 | 12V-21W front flasher |
| 10 | Safety key switch | 30 | Pick-up |
| 11 | 3-pos.. connector for RH control | 31 | Verical cylinder electronic device |
| 12 | RH control: electric starter - emergency switch | 32 | H.T. coil of vert. cylinder |
| 13 | 9 - pos. connector ro R.H. control | 33 | Vertical cylinder resistance |
| 14 | L.H. control: lights - flashing - flashers - horn | 34 | Vertical cylinder spark plug |
| 15 | MOTOPLAT Voltimeter | 35 | Horizontal cylinder electronic device |
| 16 | Horn | 36 | H.T. coil of horizontal cylinder |
| 17 | Fuse box | 37 | Horizontal cylinder resistance |
| 18 | 12V electronic bridge regulator | 38 | Horizontal cylinder spark plug |
| 19 | YUASA YB 14L/A2 - 12V - 14Ah battery | 39 | Oil pressure switch |
| 20 | Front stop switch | 40 | 12V-200W alternator |

CABLE CODES and COLOURS

- | | | | |
|-----|---------------|------|----------------|
| B | = Blue | Bn | = Brown |
| BK | = Black | R-Bk | = Red-Black |
| R | = Red | W-R | = White-Red |
| W | = White | W-Bk | = White-Black |
| Y | = Yellow | O-Bk | = Orange-Black |
| G | = Green | B-Bk | = Blue-Black |
| L-G | = Light green | G-Bk | = Green-Black |
| O | = Orange | B-R | = Blue-Red |
| Gr | = Grey | V | = Violet |