



Scottoil: Ducati Multistrada 1200 2010- Scottoil vSystem Installation Guide

Note: The HCR (sold separately) is not compatible with this model, we recommend the Lube Tube instead
The Dual Injector (sold separately) is not compatible with this model.



Locate the vacuum – There is a vacuum point on the inlet tract. Remove the screw and replace with the M6 Brass Spigot from the Scottoil kit, using some RTV Silicon Sealant on the threads to ensure an airtight seal. Then press the Damper Elbow, part number 4, onto the spigot. For further information see our easy step installation guide - [Vacuum Connections, General](#).

See picture below left



Note: Looking from Right Hand Side of bike


The RMV can be mounted on the frame or under the seat. The more vertical the RMV the better and remember to avoid exhaust and engine components. For further information, see our easy step installation guide – [Reservoir Positions, General](#).

See third picture



A dispenser can be made using vacuum tubing and a Small Dispenser Plate & Clip secured to the slipper strip bolt. The tubing has been routed through the rear brake line guide. For further information see our easy step installation guide - [Dispenser Assemblies, General](#). The nib should feed the rear sprocket between the 6 & 7 o'clock positions, with the cut face facing outwards.

See picture bottom left

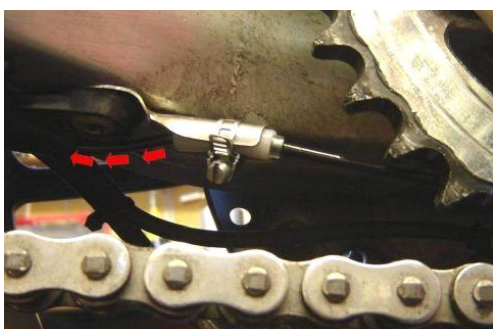

Note: Picture shows a similar Swingarm

Once fitted, [fill and prime](#) the system and set the adjuster knob to 'prime'. Start the engine and turn the adjuster knob until a flow of between 1 and 2 drops per minute is achieved. Check the condition of your chain after a ride, and then adjust as required.

For best results clean your chain before fitting the Scottoil using paraffin or similar. Then lightly oil the chain from the bottle using a rag or a brush, this allows the oil from the Scottoil to reach both sides of the chain. 1 to 2 drops per minute will maintain this film of oil on the chain.

If you have any further comments or queries, and are unable to resolve them using our website, please do not hesitate to call technical on 0141 955 1100 or email technical@scottoiler.com for assistance. Thank you.

Scottoil Ltd. 2 Riverside, Milngavie, Glasgow, G62 6PL Tel. 0141 955 1100 Fax. 0141 956 5896 www.scottoiler.com

